




V-T7 ZEROING INSTRUCTION MANUAL

Training Cartridge for use with TASER 7™ CEW

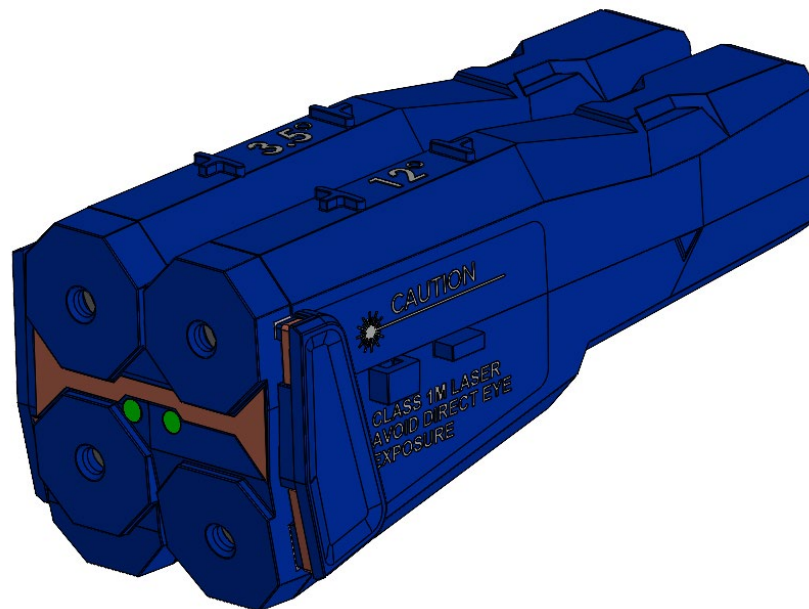

COPYRIGHT / TRADEMARKS

No part of this publication may be reproduced, transcribed, stored in a retrieval system, translated into any language, or transmitted in any form or by any means, electronic, mechanical, magnetic, optical, chemical, photocopying, manual, or otherwise, without prior written permission from VirTra Inc. Ownership of all product names used in this manual are ascribed to their respective owners and hereby acknowledged as such.

DISCLAIMER

This manual is intended to be used as a practical and informative guide only and is not to be used as legal authority for any purpose. Specific legal authority comes exclusively from statute and case law. VirTra Inc. shall not be liable for any incidental or consequential damage resulting from the performance or use of this product. In the interest of continued product improvement, we reserve the right to revise, modify or alter the contents of this manual at any time without notice and without obligation to notify any person of such revision or changes.

VirTra disclaims liability for any injury to persons or to property, or other damages of any nature whatsoever, whether special, indirect, consequential, or compensatory, directly, or indirectly resulting from the publication, use of, or reliance on this manual. VirTra also makes no guarantee or warranty as to the accuracy or completeness of any information published herein.

CAUTIONS AND WARNINGS

Read, understand, and follow all warnings, training materials, and safety instructions for the TASER 7™.

WARNING: The laser beam is not visible to the human eye. **DO NOT** look into the laser emission ports.

WARNING: V-T7 TRAINING CARTRIDGES are for training purposes only.

CAUTION: High Voltage in Use. Do not place hand or any part of the body on or near the front of the V-T7-12/3.5 TRAINING CARTRIDGE when TASER 7™ is activated.
DO NOT aim TASER 7™ at any person.

The procedures described below are to be performed by trained personnel. Any procedures not covered in this user manual are considered Factory Maintenance & Repair and it is required that the item be sent to VirTra for repair.

TABLE OF CONTENTS

I.	OPERATING INSTRUCTIONS.....	4
A.	CARTRIDGE INSTALLATION AND REMOVAL	4
B.	ZEROING.....	4
II.	CONTACT VIRTRA	10

I. OPERATING INSTRUCTIONS

A. CARTRIDGE INSTALLATION AND REMOVAL

1. Verify the TASER 7 is turned off (safety selector down covering the red dot and exposing the green dot).
2. Insert the cartridge into the TASER 7 handle.
3. Press the TASER 7 cartridge into the cavity of the TASER 7 until it “clicks” into place. This could be a very quiet “click” so verify cartridge insertion by tugging on the cartridge.
4. Remove the TASER 7 cartridge by pressing the cartridge release button on the top of the TASER 7 Handle.


B. ZEROING

Ensure the cartridge is zeroed prior to training. To do so, follow these steps:

- Select the HOME button



- Select the Administration Tab

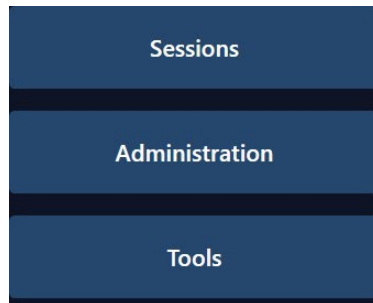


- Select V-Tracking Tools



- Select Free-Fire Diagnostics




- Move the Safety Selector to “fire” on the TASER 7.
- Fire one time and leave the Safety Selector on Fire. The Laser ID of the laser in the left bay will be displayed down range and on the instructor monitor.
- Pull the trigger on the taser handle once again and this will display the identification of the laser in the right bay down range and on the instructor monitor.
- Once the laser ID’s have been established you are ready to configure your Trainee Set.

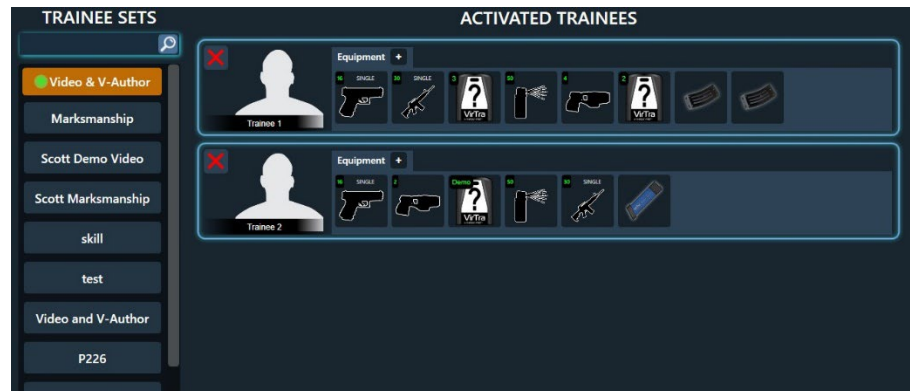


- In V-Sim Configuration you only need to add one TASER 7 to the entire Trainee Set and your TASER 7 will function on all screens. In the Marksmanship Trainee Set, you will need to configure one TASER 7 for each lane being used in marksmanship.
- To zero the TASER 7 Return to the Home Button.
- Select the Show Trainee Device Control icon.



- When the Trainee Set is displayed click on the TASER 7 and a drop-down window will appear.

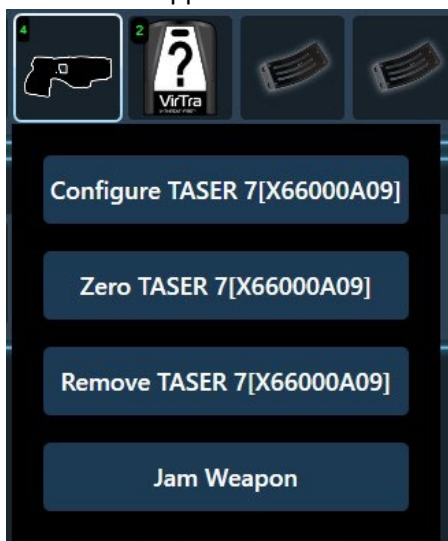

- Select “Zero TASER 7”
- Select “ALL” when the Weapon Zeroing Page comes up.

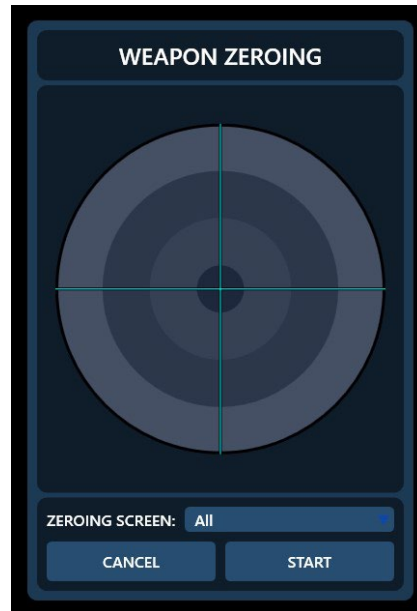


- Select “Start” and a bullseye will be displayed down range on Screen.
- At this point you are ready to zero your TASER 7.
- Move the Safety Selector Switch to “ON” and aim the green dot at the center of the bullseye and press the trigger.
- Leave the selector switch “on” and press the trigger again.
- MOVE THE SELECTOR SWITCH TO “OFF”.
- Move the Safety Selector Switch to “ON” and once again aim the green dot at the center of the bullseye and press the trigger.
- Leave the selector switch “on” and press the trigger again.
- MOVE THE SELECTOR SWITCH TO “OFF”.

You Are Now Ready to Verify Your Zero


- Place the Selector Switch to the on position.
- Fire one cartridge
- MOVE THE SELECTOR SWITCH TO “OFF”.
- Place the Selector Switch to the on position.
- Fire one cartridge
- MOVE THE SELECTOR SWITCH TO “OFF”.
- Place the Selector Switch to the on position.
- Fire one cartridge
- MOVE THE SELECTOR SWITCH TO “OFF”.
- Repeat this step on any remaining screens.
- Press SAVE to save your zero Information.

Zeroing of the Taser 7 in Marksmanship is conducted through the Boresight function and is conducted in the same manner as in V-Sim with one exception.

- Make sure you are using a Marksmanship Trainee Set.
- From the HOME button select Simulations.

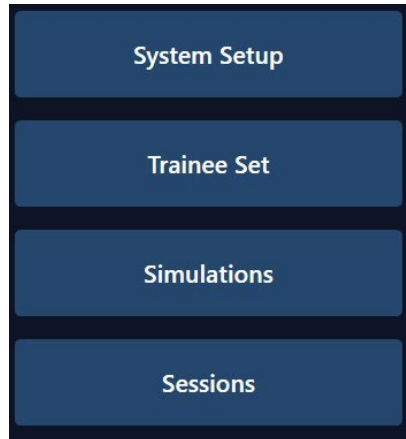

- Select Boresight.

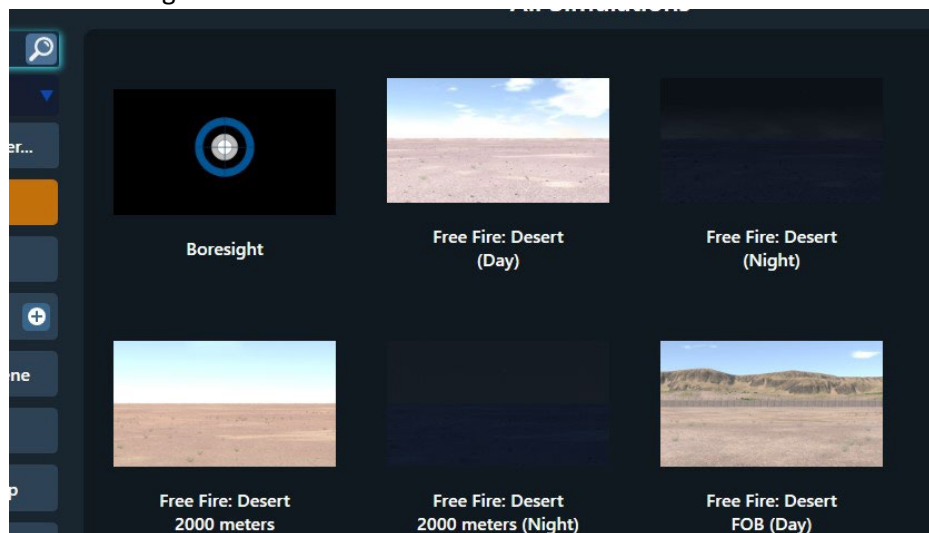

- Assume a level shooting stance, place the selector switch to “ON” and fire 1 shot of the TASER 7 at the screen to place the bullseye down range on the selected screen.



- MOVE THE SELECTOR SWITCH TO “OFF.”
- You are now ready to Boresight the TASER 7 in the same manner as in V-sim.
- Repeat on all remaining screens.
- Boresight will auto save your zero.

II. CONTACT VIRTRA

For any questions or additional help with any part of this manual, please contact VirTra via the information below.

VirTra Service Department

VirTra

295 E Corporate Pl
Chandler, AZ 85225 USA

Office: 480-508-5977

Email: service@virtra.com

V-RC Portal: portal.virtra.com

